

# Chevy Express

## Side Swing Door "passenger-side"



Side Swing Door  
"passenger-side"  
closest to front  
Housing Location



Side Swing Door  
"passenger-side"  
closest to back  
Strike Plate Location

Align this edge of the template with the edge of the door.



Mark this spot for drilling  
the 7/8" housing hole.




TEMPLATE GUIDE  
Vehicle: Chevy Express

Door: Side Swing Door  
"passenger-side"  
Closest to Front

Align factory bolt in this hole.



CUT ALONG DASHED  
LINES AND CIRCLES

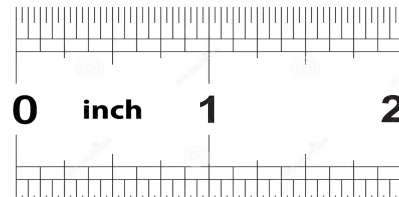

The templates are provided as a guide to help with the installation process. Once the template is printed, measure the 2-inch ruler on the printed page to ensure it is in the correct proportion. The templates were created based on late-model vans and may not fit your vehicle. We encourage you to review the provided photos of your specific van on our website. Be sure to measure twice and drill once, but only after checking that there are no obstructions behind the drilling location. Thunderbolt Locks, Inc. takes no responsibility for drilling holes in the wrong locations or for unforeseen damage. Only use the templates if you understand and are in agreement.

