


FORD E150

Side Swing Door "passenger-side"

Align factory bolt
in this hole.

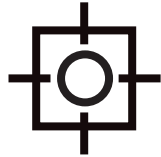

Mark this spot for
drilling the 7/8"
housing hole.

Align this edge of the template with the edge of the door.

TEMPLATE GUIDE
Vehicle: Ford E-150

Door: Side Swing Door
"passenger-side right"



9/2023




CUT ALONG
DASHED LINES
AND CIRCLES



Side Swing Door
"passenger-side right"
Housing Location



Side Swing Door
"passenger-side left"
Strike Plate Bracket Location

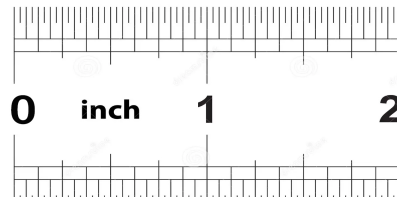

The templates are provided as a guide to help with the installation process. Once the template is printed, measure the 2-inch ruler on the printed page to ensure it is in the correct proportion. The templates were created based on late-model vans and may not fit your vehicle. We encourage you to review the provided photos of your specific van on our website. Be sure to measure twice and drill once, but only after checking that there are no obstructions behind the drilling location. Thunderbolt Locks, Inc. takes no responsibility for drilling holes in the wrong locations or for unforeseen damage. Only use the templates if you understand and are in agreement.