

FORD TRANSIT CONNECT

Front Cab Door
"passenger-side"


Align factory bolt in this hole.

TEMPLATE GUIDE


Vehicle:
FORD TRANSIT CONNECT

Door:
Front Cab Door
"passenger-side"



CUT ALONG DASHED
LINES AND CIRCLES

Align this edge of the template with the edge of the door.

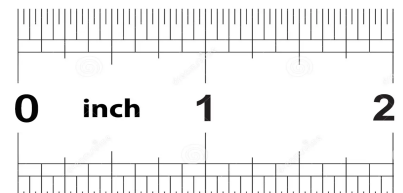

Mark this spot for drilling
the 7/8" housing hole.

8/2023

