

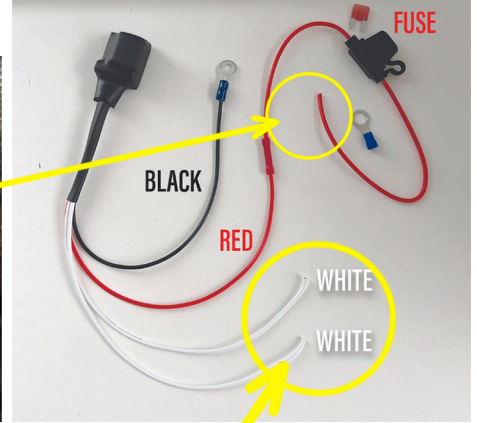


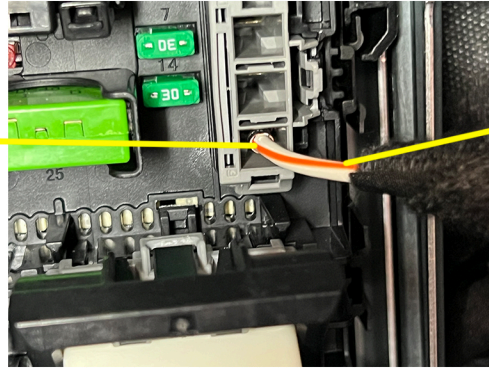

# FORD TRANSIT CONNECT LCR INSTALLATION


**NOTE:** We do not guarantee accuracy of wire identification this is only a guide and you must test your van's wires.

**RED:** 12v+ Ignition/Accessory (Key-on Power Only)  
**BLACK:** Chasis Metal Ground  
**WHITE:** Cut Side of Door Unlock Wire (either)  
**WHITE:** Cut Side of Door Unlock Wire (either)  
**FUSE:** Add Inline to the RED Ignition wire

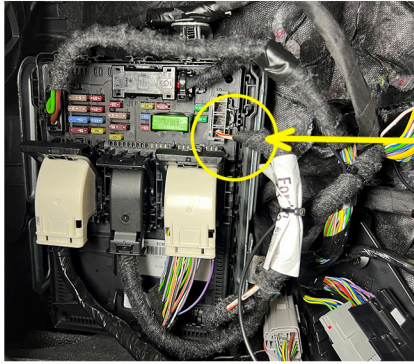

**WHITE/ORANGE**


**PIN #20 IS VIOLET/GRAY COLOR WIRE**

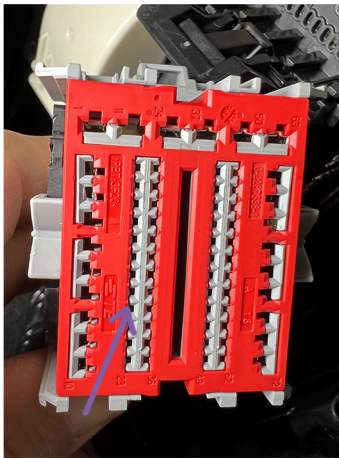


**PIN #20**



**PIN #20 IS VIOLET/GRAY COLOR WIRE**

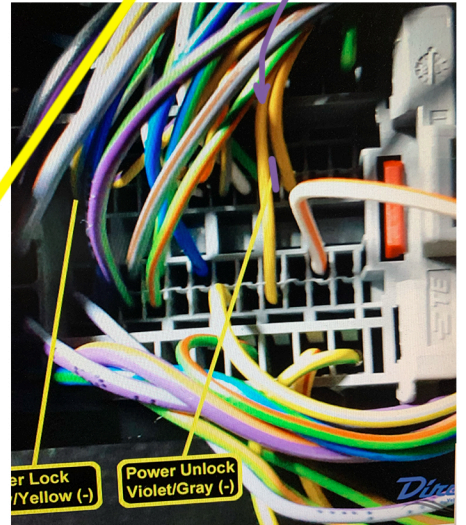

**GROUND WIRE**

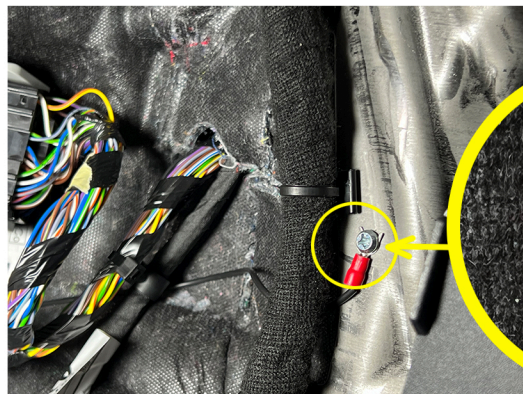

**GROUND**

