
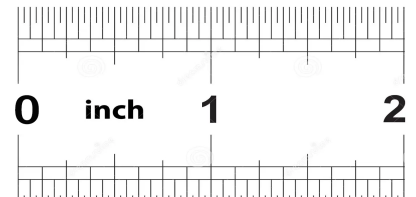


FORD TRANSIT CONNECT

Rear Swing Door
"passenger-side"

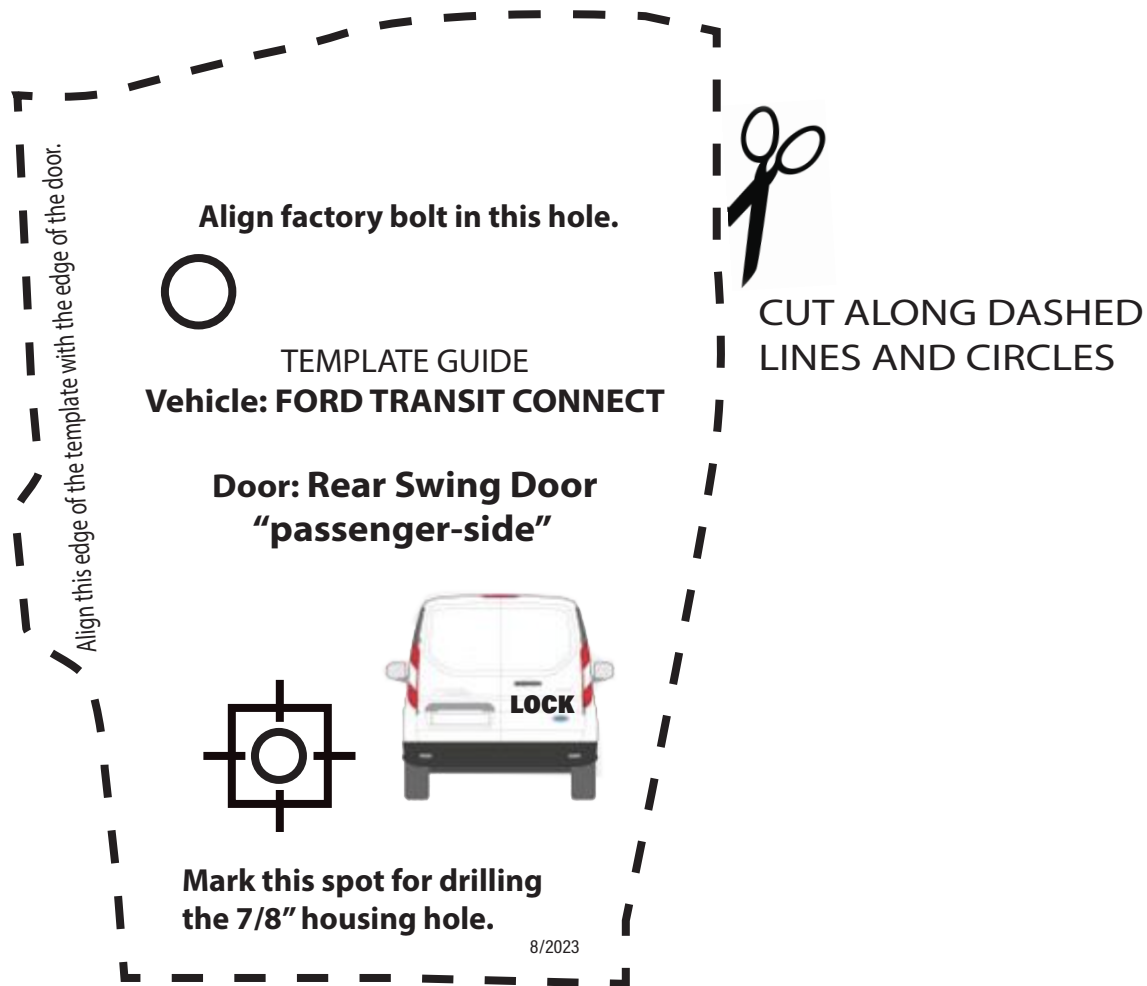

NOTE: A RAISED STRIKE BRACKET needs to be mounted on the Rear "Driver-side" door.