


FORD TRANSIT CONNECT

Side Sliding Door
"passenger-side"

 Align factory bolt in this hole.


TEMPLATE GUIDE
Vehicle:
FORD TRANSIT CONNECT

Door:
Side Sliding Door
"passenger-side"

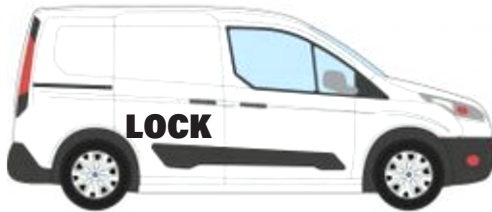

CUT ALONG DASHED
LINES AND CIRCLES

Align this edge of the template with the edge of the door.

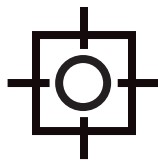

Mark this spot for drilling
the 7/8" housing hole.

