

RAM ProMaster

Front Cab Door "driver-side"




Front Cab Door
"driver-side"
Housing Location



Front Cab Door
"driver-side"
Strike Plate Location
B-Pillar


Align TOP of this Template 3" DOWN from the "center" of the "lowest" Factory Bolt like example demonstrated here

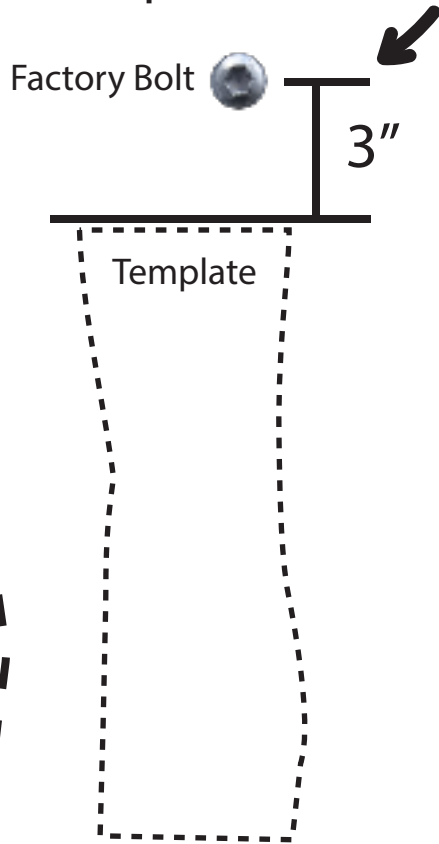


TEMPLATE GUIDE
Vehicle: ProMaster

Door: Front Cab Door
"driver-side"

Align this edge of the template with the edge of the door.

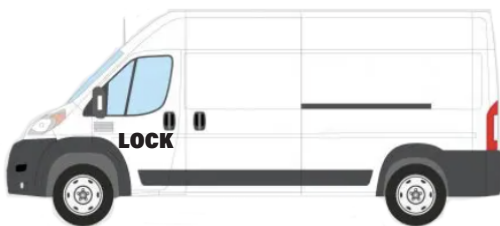


Mark this spot for drilling the 7/8" housing hole.

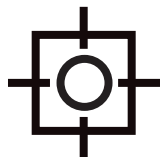

8/2023



CUT ALONG DASHED LINES AND CIRCLES

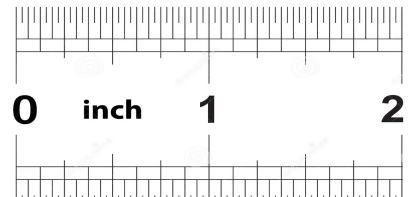

The templates are provided as a guide to help with the installation process. Once the template is printed, measure the 2-inch ruler on the printed page to ensure it is in the correct proportion. The templates were created based on late-model vans and may not fit your vehicle. We encourage you to review the provided photos of your specific van on our website. Be sure to measure twice and drill once, but only after checking that there are no obstructions behind the drilling location. Thunderbolt Locks, Inc. takes no responsibility for drilling holes in the wrong locations or for unforeseen damage. Only use the templates if you understand and are in agreement.