

RAM ProMaster

Side Sliding Door "passenger-side"



Side Sliding Door
"passenger-side"
Housing Location




Side Sliding Door
"passenger-side"
C-Pillar
Strike Plate Bracket Location

Align factory bolt in this hole.



TEMPLATE GUIDE
Vehicle: ProMaster



Door: Side Sliding Door
"passenger-side"

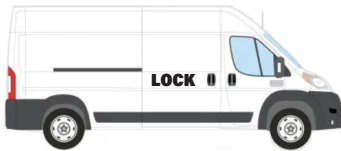

Align this edge of the template with the edge of the door.



CUT ALONG DASHED
LINES AND CIRCLES

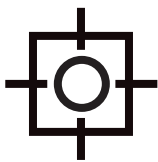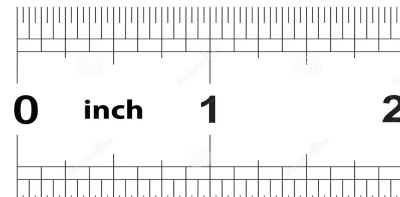

Mark this spot for drilling
the 7/8" housing hole.

11/2023

The templates are provided as a guide to help with the installation process. Once the template is printed, measure the 2-inch ruler on the printed page to ensure it is in the correct proportion. The templates were created based on late-model vans and may not fit your vehicle. We encourage you to review the provided photos of your specific van on our website. Be sure to measure twice and drill once, but only after checking that there are no obstructions behind the drilling location. Thunderbolt Locks, Inc. takes no responsibility for drilling holes in the wrong locations or for unforeseen damage. Only use the templates if you understand and are in agreement.

