

SPRINTER


Rear Swing Door "passenger-side"




Rear Swing Door "passenger-side"
Housing Location



Rear Swing Door "driver-side"
Strike Bracket Location

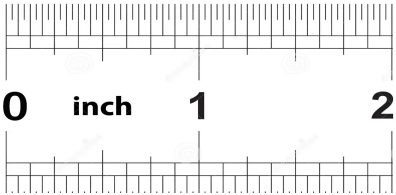


The templates are provided as a guide to help with the installation process. Once the template is printed, measure the 2-inch ruler on the printed page to ensure it is in the correct proportion. The templates were created based on late-model vans and may not fit your vehicle. We encourage you to review the provided photos of your specific van on our website. Be sure to measure twice and drill once, but only after checking that there are no obstructions behind the drilling location. Thunderbolt Locks, Inc. takes no responsibility for drilling holes in the wrong locations or for unforeseen damage. Only use the templates if you understand and are in agreement.

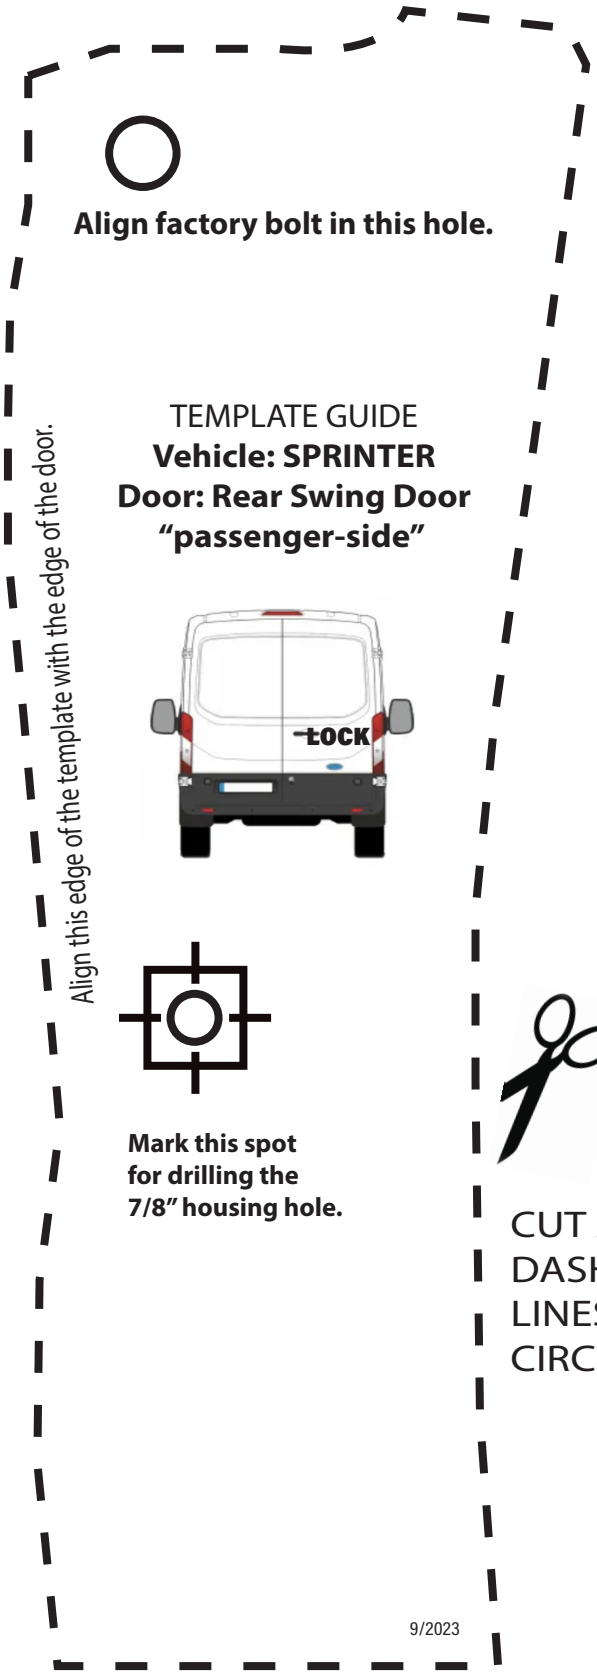

Align factory bolt in this hole.

TEMPLATE GUIDE
Vehicle: **SPRINTER**
Door: **Rear Swing Door**
"passenger-side"

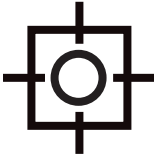

Mark this spot
for drilling the
7/8" housing hole.



CUT ALONG
DASHED
LINES AND
CIRCLES

9/2023



NOTE: A RAISED STRIKE BRACKET
gets mounted on the "driver-side"
Rear Swing Door.

